 





360°
CAM

User's Manual


1. Open the door on the right of the camera and PULL the tab towards you.

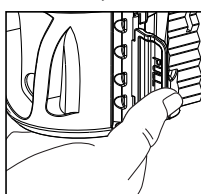

 
2. With the camera facing up, open the compartment door.

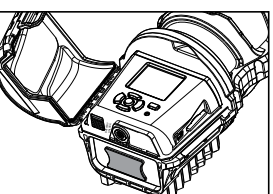

 3. Make sure to insert the AA-cell batteries based on the direction labeled on the inside of each compartment. Match minus "-" sign with the marked negative on the battery and the plus "+" sign with the marked plus sign on the battery.

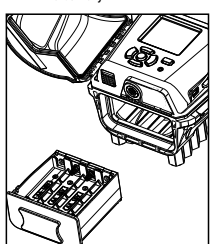

 4. Load SD memory card (up to 32GB) into the SD CARD slot with the connectors facing down.

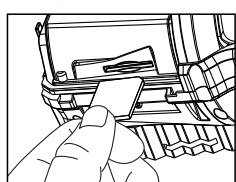


IMPORTANT:
Make sure the camera is powered off before removing or installing an SD card.


If you are using an SD card from other cameras, please make sure to format the SD card in your computer prior to use in your camera. New cards are ok to use straight from the package.

Once the batteries are in the appropriate spot, return battery compartment.

 ON:
1. To turn the unit ON press and release the power button.

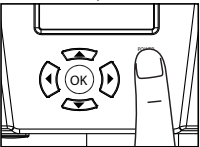


 2. Check the battery level icon to ensure the batteries just installed contain the proper charge level. If so, you are ok to proceed with camera use.

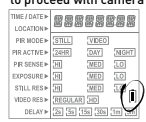

NOTE:
LCD cycle through camera information. Time → PIR picture number → Remaining pictures → Temperature

 
OFF:
1. To turn the unit off, first wake up the LCD screen and then depress and hold the power button until the LCD turns off.

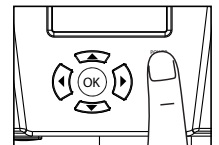

Reset button located next to the battery compartment. Push button to reset settings back to factory settings.



 LCD Ready Mode: The camera will automatically enter Ready Mode if a button is not pressed for greater than 30 seconds. The status lights will illuminate for a total of 2 minutes.

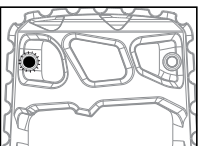

Page 1

Page 2

Page 3


Page 4

Page 5


1. After 30 seconds without any buttons being pushed, the LCD will turn off and camera enters into Power Save or Ready Mode.

2. The LCD screen can be awakened by pressing the Power button briefly.

 
NOTE:
The LCD will not "wake up" when camera is writing to memory.

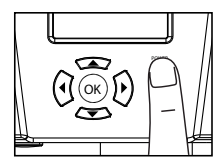

 1. To change date and time, start by pressing and release the OK button to set the hour.

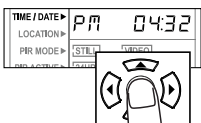


 2. Press the up or down navigation button to go up or down in sequence.

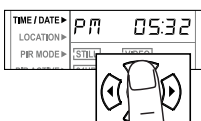


3. When the hour is set, repeat steps 1 and 2 to set the minutes.

 1. Press the OK button after setting the minute to change the Day.

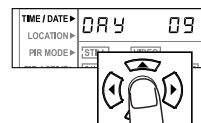

 
2. Press the up or down navigation button to go up or down in sequence.

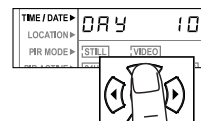


3. When the DAY is set, repeat steps 1 and 2 to set the Month and Year.

Save the location of the area the camera was installed. This is for your reference and is optional. If you do not wish to name your location stop to the next step.

 
1. Press the OK button while LOCATION is selected. The first character will be blinking.



 
2. Press the UP or DOWN navigation button to go up or down in sequence. Press the OK button or the Left and Right navigation button when the character shown is what you want and move to the next character.



 1. Repeat steps 1 and 2 to set the rest of the characters. Press the right navigation button to skip spaces and save the location name.



 
1. Press the OK button while PIR Mode is selected. The highlighted option will be blinking.




2. Press the left or right navigation button to move to different options. Press the OK button to save the setting.



 
1. Press the OK button while PIR Active is selected. The highlighted option will be blinking.



 
2. Press the left or right navigation button to move to different options. Press the OK button to save the setting.



 
1. Press the OK button while PIR Sensitivity is selected. The highlighted option will be blinking.



 
2. Press the left or right navigation button to move to different options. Press the OK button to save the setting.



 1. Press the OK button while Exposure is selected. The highlighted option will be blinking.



 2. Press the left or right navigation button to move to different options. Press the OK button to save the setting.



PIR ACTIVE:
24 HR: The PIR can be active at all times.
DAY: The PIR can be active in daylight hours only.
NIGHT: The PIR can be active in nighttime hours only.

EXPOSURE:
HI: Greatest distance with some motion blur.
MED: (Default) Long distance with little motion blur.
LO: Average distance with very little motion blur.

Page 6

Page 7


Page 8

Page 9

Page 10

Page 11

 1. Press the OK button while Resolution is selected. The highlighted option will be blinking.

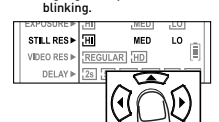


2. Press the left or right navigation button to move to different options. Press the OK button to save the setting.




1. Press the OK button while Picture is selected. The highlighted option will be blinking.



 
2. Press the left or right navigation button to move to different options. Press the OK button to save the setting.



 
1. Press the OK button while Delay is selected. The highlighted option will be blinking.

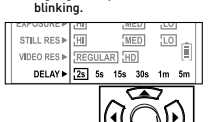

 
2. Press the left or right navigation button to move to different options. Press the OK button to save the setting.




PICTURES DISPLAY:
A- Temperature
B- Time
C- Date
D- Moon Phase
E- Location
F- Photo Count

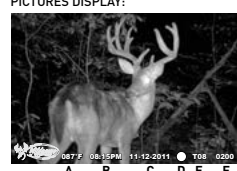 

 
1. When mounting to a tree, first remove the clip from one end of the strap so you can slide the strap through the slots located on the back of the camera. Once the camera is attached place the clip back on to the strap. Then, wrap the strap around the tree and clip the two ends together. Pull the excess material so that the camera is strapped tightly to the tree.

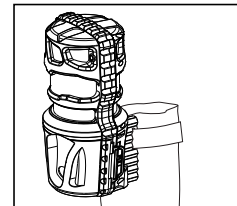

 
1. When mounting to a T-Post, first attach the T-Post bracket to the camera.

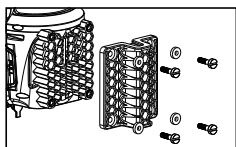

 2. Once the camera is attached connect the T-Post bracket to your T-Post.

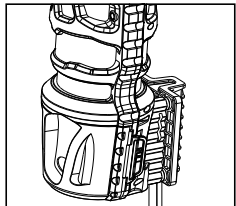

 There is also a standard 1/4"-20 tripod connector.

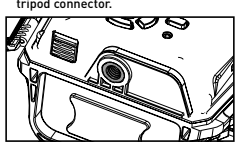

The directions as contained herein assume that you are using a Microsoft operating system and not Linux or a Mac-based operating system. Even said, there may be slight variations in your process based on the specific version of the operation system that you are using as well as the predefined user preference for each computer. The below listed steps are to serve as a guideline and may have to be slightly modified based on the specific operating system and preference as on your personal computer.

TIPS:
Recommended distance from target area is 25-30 feet for optimal imaging quality.
To improve the quality of your images, try not to mount the unit facing the rising or the setting sun in order to avoid direct sunlight into the camera lens.
If mounting to a feeder unit or dusty environment, be sure to clean the camera lens cover, incandescent flash cover, and the PIR sensor cover on a regular basis.
Periodically check the mounting of the camera to insure it is not loose.
Make sure that you securely latch the door closed each and every time you use the unit, as the moisture seal will not be activated unless closed properly.
Check batteries frequently to insure no corrosive build-up, as this may cause harm to the camera.

Remove SD card and use card reader

A. First, remove the SD Card from the camera unit itself by pressing on it to where it automatically ejects.
B. Next, insert the SD card into your SD card reader.
C. Once inserted into your computer it may automatically launch "AutoPlay", a window recognizing a new Secure Digital Storage Device (the SD Card).
D. If so, it should list several options for the next steps (not limited to the following):
1. Picture Options
a. Import pictures
b. View pictures
c. Copy Disc
d. Transfer pictures
2. General Options
a. Open folder to view files
E. Select the method from the list provided that best suits your requirements. If the selection is made to "View pictures", you can then view the images located on the SD Card and manipulate them as needed.
F. If your computer does not automatically launch the AutoPlay window recognizing the Removable Disk (the SD Card), then you will need to go to the "Start Menu" at the bottom left of your screen and select "Computer". The summary view will then be illustrated on the right hand side of the window where by the "Devices with Removable Storage" will be listed. The computer will recognize the reader as "Secure Digital Storage Device". Please select "Secure Digital Storage Device" from this menu (or double click on the graphical icon).
G. This will then direct you into the SD Card file folder. Images are in the MEDIA folder.
H. Once open, you will then see all of the photo files that are located on the SD Card. Select each image individually to view. The default viewing browser for your computer will then automatically launch.
I. Repeat for viewing all or other photos.
J. If you determine that you want to delete the image, select the image by placing your cursor on it and clicking your mouse only once. Right click on your mouse and select delete. This will delete the image permanently, so be absolutely sure you want to do this before selecting delete.

Page 12

Page 13

Page 14

Page 15

Page 16

Page 17

SDXC CARDS ARE NOT SUPPORTED

Having trouble with your SD card? Try this.

1. Connect the SD card to your computer. If your computer has an SD card slot you can insert the SD card directly into the port.

NOTE: If you are using a MicroSD card, you will need an adapter to allow it to fit into standard SD card ports. If your computer does not have an SD card port built-in, you can use an external USB card reader that plugs into any USB port on your computer.

2. Click the Start or Windows menu and select Computer [Windows Vista/7] or My Computer [Windows XP]. For Windows 8 users, type "computer" and click the Computer icon in the Apps search results.

3. Right-click the drive letter associated with your memory device, then select "Format"

4. Ensure FAT32 is selected under "File System"

5. Ensure "Quick Format" is checked

6. Click "Start"

DISCLAIMERS

WGI Innovations, LTD is not responsible for damage, expense or injury caused by the unauthorized use of, alterations to, improper connection of and abuse or neglect of the WGI Innovations™ products.

WARRANTY

For the warranty to be in effect, register your product at wildgameinnovations.com. Follow the onscreen directions to complete the process.

WGI Innovations, LTD will replace all workmanship defects free of charge for ONE (1) YEAR after the date of purchase as long as your warranty is in effect. This warranty DOES NOT COVER damage, expense or injury caused by unauthorized repairs, alterations, improper connection, shipping, abuse, theft, accident, neglect or collateral loss. When returning product(s) for service you MUST obtain a Return Merchandise Authorization (RMA) number from WGI Innovations, LTD. Please include name, UPS address (no P.O. Box), telephone number, RMA number and a complete description of the problem on all enclosed correspondence. When possible, pack product carefully in original carton. Customers are responsible for any shipping cost to WGI Innovations™. WGI Innovations™ will pay the shipping cost of replacement product to the customer, but is not responsible for damage incurred in returning items for repair.

For product service send to:
WGI Innovations™
602 Fountain Parkway
Grand Prairie, TX 75050
(800) 847-8269

CUSTOMER SERVICE

WGI Innovations, LTD. stands behind every product we manufacture for a one-year product workmanship warranty and a strong commitment to customer service. If you are in need of customer service for missing parts or need assistance with the operation or assembly of your product, we encourage you to call one of our customer service representatives and let us assist you.

DISCLAIMER

WGI Innovations, LTD reserves the right to make changes to product features, functionality and physical design at its sole discretion. As a result, such changes may not be reflected in this version of the manual.

FCC STATEMENT

Product Name: Digital Game Scouting Camera
Trade Name: Wildgame Innovations

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two criteria: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Notes:

PLANO SYNERGY

602 Fountain Parkway
Grand Prairie, TX 75050
(800) 847-8269
wildgameinnovations.com

"Wildgame Innovations" and the "Button Logo" are trademarks of Wildgame Innovations, LLC.





Mode Test

- 

-
- The diagram shows a camera's menu system. On the left, a list of menu items is shown: PIR SENSE, EXPOSURE, STILL RES, and VIDEO RES. To the right of these items are four buttons labeled HI, MED, and LO. Below the menu items is a diagram of the camera's control buttons: a central OK button, and four directional buttons (Up, Down, Left, Right) arranged around it. Arrows indicate the flow of navigation from the menu items to the buttons and from the buttons to the next menu item.

Économie d'Énergie

- Relevez le loquet pour débloquer le compartiment des piles, en tirant en même temps sur celui-ci pour l'extraire.

-

vous aller dans le menu «Démarrer» en bas et gauche de l'écran et sélectionner «Ordinateur»

Dans la partie droite de la fenêtre s'affichera une récapitulative, et en particulier les «Périphériques utilisant des supports amovibles»

L'ordinateur identifiera le lecteur en tant que «Disque dur périphérique de stockage SD»

Périphérique de stockage SD» dans ce menu au double-clic sur l'icône correspondante.

Vous ouvrirez ainsi le dossier de votre carte

Les photos se trouvent dans le dossier EDIA.

En les ouvrant, vous verrez tous les fichiers photo se trouvant sur la carte SD. Sélectionnez l'image à insérer dans le logiciel de visualisation.

Le programme de visualisation au défaut de votre ordinateur s'ouvrira automatiquement.

Faites de même pour visualiser toutes les autres photos.

Si vous souhaitez supprimer une image, sélectionnez-la à l'aide de votre souris, puis cliquez sur la seule fois sur le bouton de la souris avec le bouton droit et sélectionnez supprimer. Ceci effacera définitivement l'image, ne vérifiez soigneusement ce que vous voulez supprimer.

Réglage de l'Heure

- | Still Res. | Délai |
|------------|-------|
|------------|-------|

- ## Formater la Carte SD

REMARQUE : si vous utilisez une carte MicroSD, vous aurez besoin d'un adaptateur pour vous permettre de l'insérer dans des ports standards. Si votre ordinateur n'a pas de port intégré pour la carte SD, vous pouvez utiliser un lecteur de cartes externe qui se branche sans n'importe quel port USB sur votre ordinateur.

Cliquez sur le menu Démarrer ou le menu Windows et sélectionnez Poste de travail (Windows Vista/7) ou Mon Poste de Travail (Windows XP) pour les utilisateurs de Windows, tapez « ordinateur » et cliquez sur l'icône Ordinateur parmi les résultats de recherche es applis.

Cliquez avec le bouton droit de votre souris sur la lettre correspondant à votre dispositif de mémoire, puis sélectionnez « formater »

Assurez-vous que FAT32 soit sélectionné sous « Système de Fichiers »

Assurez-vous que « Format rapide » soit sélectionné

Réglage de la Date

- Vidéo Res.

- ## Garantie

acceptez que votre garantie est en vigueur. Cette garantie ne couvre aucun dommage, dépense ou dommage causés par des réparations non autorisées, altérations, d'une connexion incorrecte, le transport maritime, l'eau, ou accident, négligence ou la perte collatérale en cas de retour du produit (i) pour le service, vous DEVEZ obtenir une autorisation de retour écrite de la franchise (RMA) auprès du WGI Innovations, LTD. Si vous plait inclure le nom, l'adresse UPS (pas de boîte postale), numéro de téléphone, le numéro de RMA et une description complète du problème sur toute correspondance écrite. Lorsque cela est possible, emballer le produit soigneusement dans le carton d'origine. Les clients sont responsables de tous les frais d'expédition à WGI Innovations " WGI Innovations " paiera les frais d'expédition du produit au remplacement pour le client. Nous ne sommes pas responsables des dommages causés au retour d'articles pour un remplacement.

Le service produit envoyer à:
WGI Innovations"
c/o Fountain Parkway
and Prairie, TX 75050
(817) 847-8269

CUSTOMER SERVICE

WGI Innovations, LTD. se tient derrière chaque produit que nous fabriquons pour une garantie de fabrication de produits et nous n'en engageons pour au service du client. Si vous avez besoin de service à la clientèle pour des pièces manquantes ou besoin d'aide pour le fonctionnement ou l'assemblage de votre produit, nous vous invitons à contacter un de nos représentants de service à la clientèle et laissez-nous vous aider dans vos innovations WGI Innovations" produit.

DISCLAIMER

WGI Innovations, LTD. se réserve le droit d'apporter des modifications aux caractéristiques des produits, la fonctionnalité ou la conception physique à sa seule discrétion. En conséquence, de tels changements ne peuvent pas être reflétés dans la présente version de manuel.

Lieu

- ## Montage

Mode PIR **PIR Actif**

ctif que durant la nuit.

