

Wildgame Innovations
Mirage Software Update Instructions

If you prefer to use the “1-min delay” setting on your Mirage camera, you may decide to download a software update to resolve any anomalies you may be experiencing while in the “1-min delay” setting.

Note: All other delay settings are working seamlessly. If you commonly use other delay settings, there is no need for a software update.


Please review these step-by-step instructions to download the necessary update. Our customer service team is available to help if you have any further problems. Call (800) 847-8269 to speak with a Wildgame Innovations representative.

IMPORTANT: Please follow these troubleshooting tips before beginning the software update.

1. WARNING: Once the update has started, do NOT press any buttons or take any action with the camera. Altering the camera during the update process could permanently damage the unit.
2. In addition to your Mirage camera, you will need an SD card and a computer. If your computer does not have an SD card port, you will also need an SD card reader to connect to the computer.
3. Make sure your camera has a fresh set of batteries.

STEP ONE: Identify which software your Mirage camera currently has.

1. Press the “-” and “POWER” buttons at the same time for approximately 5 seconds.
2. You should see 8 digits display on the LCD screen. These 8 digits denote the software version currently housed on your camera.

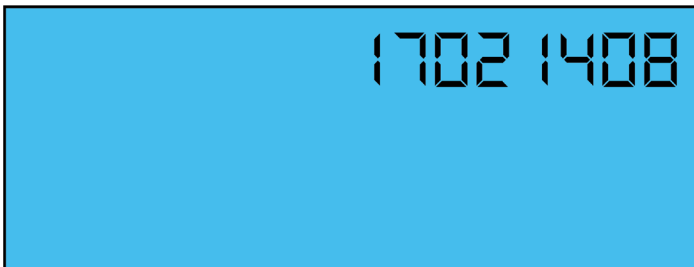

Wildgame Innovations
Mirage Software Update Instructions

- Locate the 8-digit code of your current software in the below chart (column labeled “Current Software”), and the corresponding software update your camera requires (column labeled “New Software”).


Series	CMOS Sensor	Current Software	New Software
M16i xxxxx	OV2735	17112006	18081706
		17112806	
		17121506	
M18i xxxxx	OV2735	17112108	18081808
		17112908	
		17121608	
M16b xxxxx	OV2710	17110806	18081506
		17112706	
		17121306	
	OV2735	18010506	18081906
M18b xxxxx	OV2710	17112608	18081608
		17121408	
	OV2735	18010608	18082008

- Write down the new software code needed for your camera’s update. It should be another 8-digit code.
- Turn off the camera.


STEP TWO: Update your Mirage camera’s software.

- Insert an SD card into your computer SD card port, or use an SD card reader that plugs into your computer.
- Go to <http://www.wildgameinnovations.com/trailcameraupdate> for a complete list of downloadable software folders.
- Select the folder that matches the new software 8-digit code identified in STEP 1.
- There should be three files in the folder. Either copy and paste or drag and drop all three files onto the SD card root directory.


Wildgame Innovations
Mirage Software Update Instructions

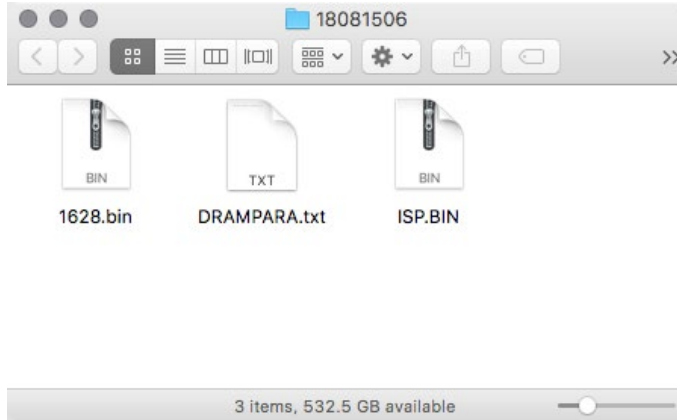

5. Once the files have been placed on the SD card, remove the SD card from the computer or SD card reader, and insert the SD card into your Mirage camera.
6. Press the “-” and “POWER” buttons at the same time for approximately 5 seconds. You should see the current software (to be replaced) 8-digit code on the LCD screen.

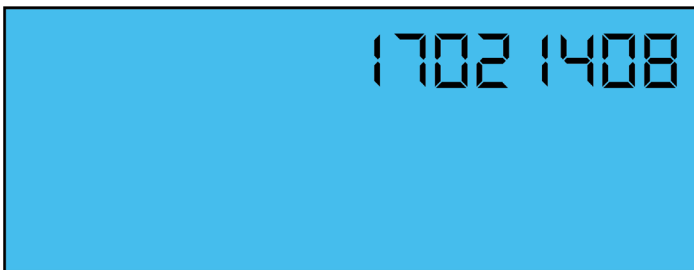

7. Press the “-” button 9 times until the screen reads “UPDA_FW.”

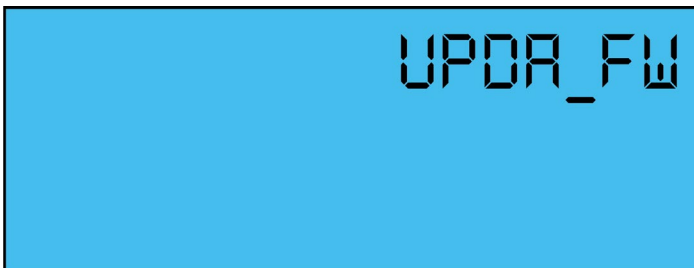

8. Press “ENTER” to begin the software update.
Important: Do NOT press any buttons or eject your SD card during the update process.
9. Once the LCD turns off, the update is complete. It should take about 1 minute.

STEP THREE: Return SD card to normal functionality.

1. Eject the SD card from your camera.
2. Load the SD card back into your computer or SD card reader.

Wildgame Innovations
Mirage Software Update Instructions

3. Move all three software files used during the update to the computer trash bin.
4. The SD card is now ready to be used for regular memory storage.